

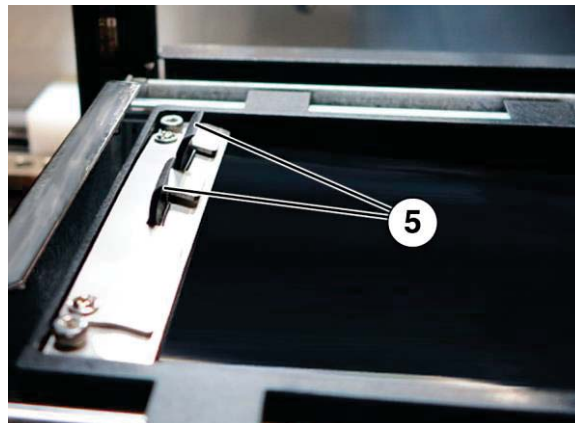
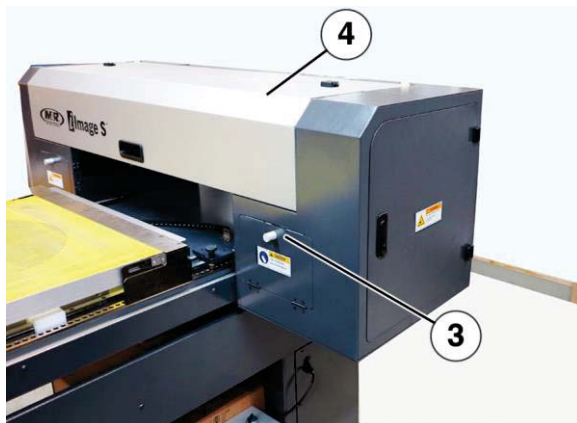


3. With the printhead still under the left side cover open the **Access Door** (3) and **Top Cover** (4). With the printhead out of the way, use a soft cloth dampened with warm water, gently wipe and clean the vertical portions of the wiper blades (5). Inspect the blades carefully for any damage, such as nicks or cuts. Replace as necessary.

**Note:** It is recommended to wear rubber gloves for the rest of the cleaning process.

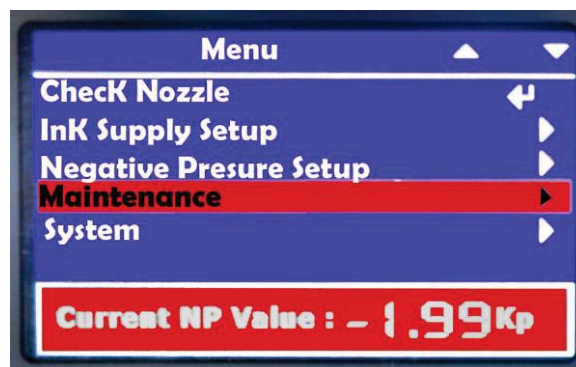


4. To gain access to the capping station press the **Menu** button (6), then press the arrow down button to highlight **Maintenance**.

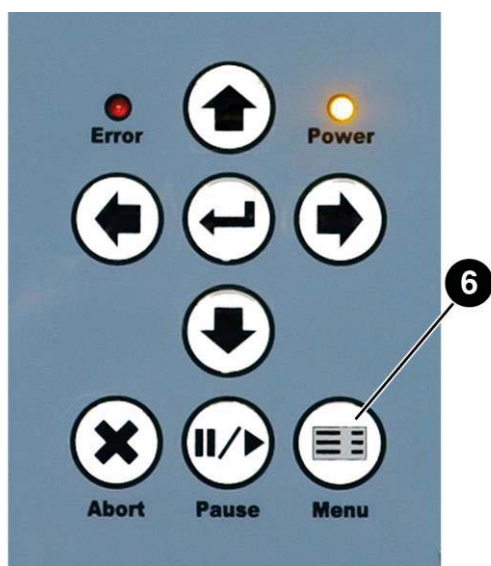

5. Press the arrow right button to highlight **Cap**, and then press the arrow right button to highlight **Cap Maintain On** and press enter.




6. The **Wiper Tray** (7) will move back to reveal the **Cap Tray** (8). Keep the underline portion clean.

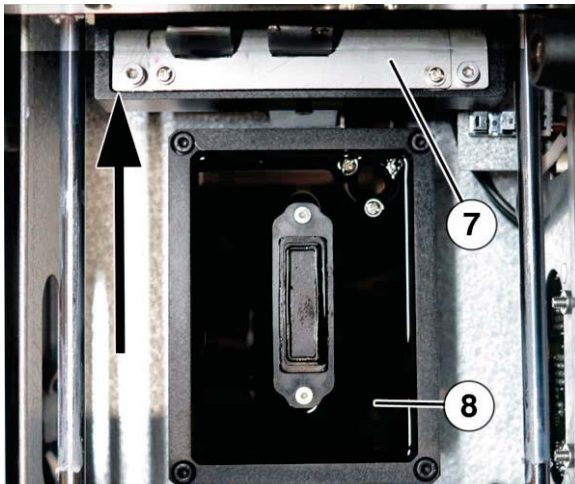

7. Closely inspect the capping station (9) for any harden ink particles or chunks, carefully wipe away any debris using caution to not damage the rubber seal.

**Note:** DO NOT USE a sharp instrument to remove debris from capping station plate as damage to the rubber seals may occur.

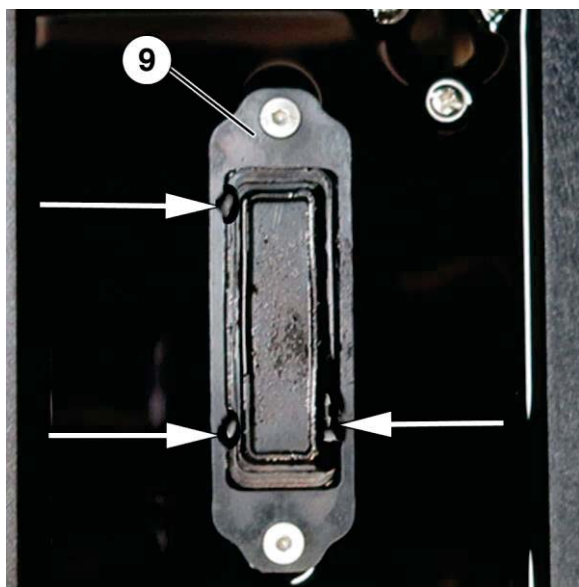

8. Wipe any excess ink from the surrounding covers and printhead carriage bearing rail (10). When finished use the arrow down to highlight **Cap Maintain Off** and press enter.

